

Instructions by Monster Shop (UK)

Flexible Lawn Edging

27025-27033

Unit Overview

The stylish solution to suit your gardening needs! Flexible lawn edging is an incredibly innovative way to make crisp borders; styling your paths, flower beds, lawns and vegetable plots. Flexible up to 70 degrees, our lawn edging will shape to almost any curve, giving you a beautifully natural looking landscape.

Perfect no matter the weather; this durable lawn edging is weatherproof and UV resistant. It is also safe to use around children making this the ideal addition to your garden.

The carefully constructed design means mowing your garden has never been easier! Lawnmower friendly, this edging removes the need for strimming giving you fresh borders in no time at all.

Secure without any hassle using the included nails and pins, for a quick and easy outdoor makeover. Easy to install, this brilliantly simple solution will give your garden that perfect finishing touch. So what are you waiting for? Renovate your outdoor space and become your very own garden landscaper!

Specifications

Product features:

- Lawn edging flexible up to 70 degrees
- Available in black, grey, green, terracotta, brown
- 1.2m long- get more from your lawn edging
- Lawnmower and child friendly
- Weatherproof and UV resistant
- Quick and easy to install

Specifications Per Piece:

- Edging Material: UV-Resistant Rubber
- Nails and Pins Material: Plastic
- Weight: 3.4Kg
- Height: 8.1cm / 81mm / 3.2"
- Depth: 8.1cm / 81mm / 3.2"
- Length: 120cm / 1200mm / 47.3"

Safety Advice

- Ensure you have read and fully understood the instruction manual and safety advice before using this product.
- Always wear appropriate gloves and protective clothing when handling the rubber edging and plastic pegs to prevent cuts, abrasions, or skin irritation.
- Inspect the product before installation to ensure there are no defects, such as cracks, sharp edges, or damaged pegs, which could cause injury or affect performance.
- Only install the edging on firm, even ground to prevent instability or movement over time
- Use appropriate tools for installation, ensuring that pegs are driven into the ground securely and evenly to prevent tripping hazards or product displacement.
- Do not attempt to install the edging in extremely hard or frozen ground without first softening the soil to avoid damaging the pegs or causing injury.
- Ensure the pegs are fully inserted into the ground and not protruding, as exposed pegs may create a tripping hazard.
- Do not use excessive force when hammering the pegs into place, as this may cause them to break or create sharp fragments that could cause injury.
- Keep hands and fingers away from the installation area when inserting pegs to avoid accidental injury.
- Avoid installing the edging in areas where it may be subject to heavy loads, such as vehicle traffic, unless it is specifically designed for such use.
- Ensure the edging does not create an obstruction in walkways, driveways, or paths that could pose a tripping hazard.
- Regularly inspect the edging and pegs for signs of wear, damage, or displacement and replace or reposition them as necessary to maintain safety and effectiveness.
- If the edging becomes loose, damaged, or displaced, repair or remove it immediately to prevent hazards.
- Store any unused edging and pegs in a dry, cool place away from direct sunlight to prevent material degradation.
- Keep the product out of reach of children and pets before and during installation to prevent accidental ingestion, choking hazards, or injury.
- Do not burn or expose the rubber edging to open flames, as it may release harmful fumes or create a fire hazard.
- If removal is required, ensure all pegs are safely extracted from the ground to prevent sharp or protruding objects being left behind, which could cause injury.
- Dispose of damaged or unwanted edging and pegs in accordance with local waste disposal regulations.

Steps (2)

1. Maintenance

- Ensure you have read and fully understood the instruction manual and safety advice before using this product.
- Always wear suitable gloves during installation, maintenance, or removal to avoid injury from sharp tools, rough surfaces, or pinching hazards.
- Install only on stable, level ground free from large stones, roots, or debris that could interfere with anchoring or cause uneven pressure on the edging.
- Do not use power tools or heavy machinery directly on or near the edging material during installation or lawn maintenance to prevent accidental cuts, melting, or displacement.
- Use only the plastic nails and pins provided with the product; substituting them with metal or unsuitable fasteners may damage the edging or present safety hazards.
- Do not attempt to bend the rubber edging beyond its designed flexibility range. Excessive force may cause permanent deformation, cracking, or breakage.
- Avoid installing in extreme cold conditions (below 5°C), as UV-resistant rubber may stiffen and become more prone to cracking during manipulation.
- Ensure all pins and nails are fully inserted and flush with the ground to prevent trip hazards and lawn equipment damage.
- Maintain a safe distance from the edging when operating lawnmowers, strimmers, or edging tools to avoid snagging or damaging the product.
- Periodically inspect the edging, nails, and pins for signs of wear, loosening, or damage; replace any compromised components immediately.
- Ensure the edging remains securely anchored over time, particularly after heavy rain, frost, or ground movement, which may cause shifting or partial dislodgement.
- Do not expose the edging to direct flames, fire pits, or other high heat sources, as rubber is combustible and may degrade or release harmful fumes.
- Avoid contact with corrosive chemicals such as weed killers, petrol, solvents, or pesticides not rated as safe for rubber-based garden products.
- Store any unused edging or spare components in a cool, dry, and shaded location away from direct sunlight to prolong material lifespan and avoid warping.
- When removing or relocating the edging, pull the pins vertically and slowly to prevent snapping or soil disturbance. Always clear the surrounding area before attempting removal.
- Keep children and pets away from the installation area until the edging is fully secured and checked for stability.
- Do not use this product to retain soil, gravel, or mulch at heights greater than the product's designed vertical limit. Overloading can result in collapse or edging failure.
- Clean the rubber edging periodically with water and a mild detergent to remove organic build-up that may encourage moss or algae growth, which can create slip

hazards.

- This product is intended for domestic landscaping and lawn edging use only; do not use in load-bearing or structural applications.
- If any part of the product becomes detached, cracked, or brittle, remove it immediately and replace with suitable components to avoid hazards and maintain edging integrity.

2. Troubleshooting

WHAT DO I DO IF THERE ARE MISSING PARTS FROM MY ORDER?

• If there appears to be any part missing from your order, contact our friendly and helpful Customer Support Team within 7 days of receipt.

FOR ALL OTHER ISSUES, PLEASE CONTACT OUR CUSTOMER SUPPORT TEAM.

Terms of Service: https://monstershop.co.uk/policies/terms-of-service